

Study of a zirconium getter for purification of xenon gas

A. Dobi, D. S. Leonard¹, C. Hall, L. Kaufman, T. Langford, S. Slutsky,
Y.-R. Yen

Department of Physics, University of Maryland, College Park MD, 20742 USA

Abstract

Oxygen, nitrogen and methane purification efficiencies for a common zirconium getter are measured in 1050 Torr of xenon gas. Starting with impurity concentrations near 10^{-6} g/g, the outlet impurity level is found to be less than $120 \cdot 10^{-12}$ g/g for O_2 and less than $950 \cdot 10^{-12}$ g/g for N_2 . For methane we find residual contamination of the purified gas at concentrations varying over three orders of magnitude, depending on the purifier temperature and the gas flow rate. A slight reduction in the purifier's methane efficiency is observed after 13 mg of this impurity has been absorbed, which we attribute to partial exhaustion of the purifier's capacity for this species. We also find that the purifier's ability to absorb N_2 and methane can be extinguished long before any decrease in O_2 performance is observed, and slower flow rates should be employed for xenon purification due to the cooling effect that the heavy gas has on the getter.

Key words: Noble gas, purification, non-evaporable heated zirconium getter, cold trap, mass spectroscopy

1. Introduction

Liquefied noble gases have been widely adopted as a particle detection medium in recent years. These materials are attractive candidates for detectors due to their low ionization potential, high scintillation efficiency, and, in the case of xenon, high density and stopping power [1]. The successful operation of these detectors requires that the noble liquid should be almost entirely free of non-inert impurities such as O_2 and H_2O because these species impair the transport of both scintillation light and ionization charge.

Achieving extremely low levels of electronegative impurities is of particular concern for ionization detectors. For example, the presence of O_2 at

31 only the part-per-billion level will give rise to a free electron lifetime of several
32 hundred microseconds, which is comparable to the drift time of many present-
33 day detectors [2]. Next generation experiments will require drift distances
34 an order of magnitude larger than those currently existing, and therefore
35 a proportional increase in the purity must be obtained. Reliably achieving
36 such purities is a significant technical barrier that these experiments must
37 overcome.

38 While a variety of noble gas purification technologies have been shown
39 to give good results [3–10], the most common technology in use today is
40 the heated zirconium getter. Zirconium is an effective absorbent because
41 its surface bonds with virtually any non-noble gas species [11], including
42 O_2 , H_2O , N_2 , CO_2 , and CH_4 . These getters are operated at a temperature of
43 several hundred degrees Celsius, which encourages impurities that are bonded
44 to surface sites to diffuse into the bulk, leaving the surface available for
45 additional gettering. The efficiency improves significantly as the temperature
46 increases due to the decrease in the diffusion time [12–14].

47 Zirconium getters designed for noble gas purification are commercially
48 available, and the SAES Monotorr series in particular has been widely adopted
49 for particle detection applications. SAES specifies and guarantees the per-
50 formance of the Monotorr for helium and argon service, but they have not
51 performed any measurements in xenon due to the high cost of this rare gas.
52 We are not aware of any previous measurements of the performance of the
53 Monotorr in gaseous xenon with sensitivity at the part-per-billion level.

54 It is reasonable to expect that the getter performance in xenon will be
55 similar to that of argon and helium, and xenon detectors have seen good
56 results while using these purifiers. Nevertheless, it is conceivable that the
57 getter temperature may be negatively affected by the high mass of this noble
58 gas, and this could reduce the purifier’s efficiency.

59 Here we report measurements of the xenon purification efficiency of the
60 SAES Monotorr PS4-MT3 [15]. We have studied the performance of this
61 zirconium getter for removal of O_2 and N_2 , two common electronegative im-
62 purity species found in small quantities in virtually all sources of xenon. We
63 have also studied the removal of methane, a less common contaminant which
64 is present in the atmosphere at only the part-per-million level. Methane is
65 not electronegative, so it does not present a problem for charge transport.
66 In fact, a few percent of methane is sometimes added to xenon in order to
67 increase the charge drift speed [16]. Methane can also have negative conse-
68 quences, however, because it quenches the dimer molecules responsible for

the fluorescence emission [17].

We have chosen to study methane removal from xenon for several reasons. First, methane is largely inert, so it represents one of the most challenging cases for a xenon purifier [14, 18–20]. Second, our measurement technique is sensitive to methane at concentrations as low as $60 \cdot 10^{-12}$ g/g, and therefore we can measure the purifier performance very accurately for this gas. Finally, methane isomers such as $^{14}\text{CH}_4$ or CH_3T are candidates for internal beta calibration sources for large liquid xenon experiments. Since these sources would need to be removed from the xenon at the conclusion of the calibration run, it is important to understand quantitatively the performance and limitations of the zirconium getter for this impurity.

2. Measurement technique

The xenon handling system for our experiments is shown in Fig. 1. Xenon gas is stored in one of two 15.73 liter aluminum storage cylinders and supplied to the system through a regulator. The gas is cryopumped into the second cylinder by immersing it in liquid nitrogen. The plumbing is designed to allow the gas to flow either through the purifier (purify mode) or around the purifier (bypass mode). Flow rates were measured using a mass flow meter from MKS. The absolute scale of the flow meter is calibrated by transferring a known mass of xenon gas at a constant rate through the meter.

To measure the purity of the xenon gas before and after purification, we use an RGA/coldtrap technique described in Ref. [21]. We use a leak valve to sample the gas composition at the output of the purifier. The chemical composition of the sampled gas is measured by a residual gas analyzer (RGA, model: SRS RGA200), a mass spectroscopy device which operates at low pressures (10^{-5} Torr or less). To improve the sensitivity of the method, we remove most of the xenon from the low pressure gas sample with a liquid nitrogen coldtrap before it reaches the RGA. The impurities which we study in this paper (N_2 , O_2 , and CH_4) have relatively high vapor pressures compared to xenon at 77 K, and they survive the cold trap in large enough quantities to be measured. The selective rejection of the xenon gas allows the sampling rate of the leak valve to be vastly increased without saturating the RGA with a high partial pressure of the bulk xenon gas. The measurement is calibrated by preparing xenon gas samples which are spiked with known amounts of the various impurities under study. Using this method the RGA’s impurity sensitivity is boosted from $\sim 10^{-5}$ to $60 \cdot 10^{-12}$ g/g for

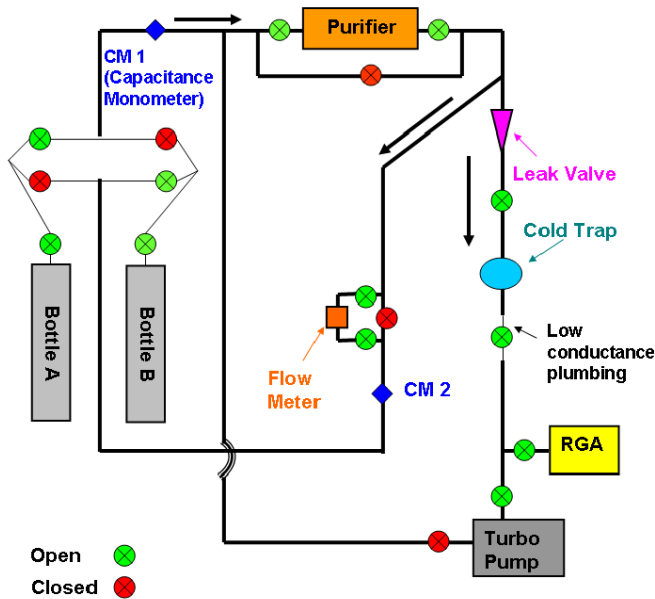


Figure 1: The xenon handling system for the experiment. The impurity concentration of the gas is analyzed downstream of the purifier using the coldtrap and RGA.

methane. For N_2 the limit of detection is less than 10^{-9} g/g and for O_2 it is about $120 \cdot 10^{-12}$ g/g. The limitations for the different species are due to their specific background levels. All signals used for data analysis were background subtracted to compensate for outgassing in the plumbing from the coldtrap to the RGA. We expect the boost in the RGA's performance to be an order of magnitude greater if the plumbing from the coldtrap to the RGA is baked. We note here that the concentration of impurities in the xenon gas is observed to be linear with the partial pressure measured by the RGA, so that a factor of ten reduction in the partial pressure corresponds to a factor of ten reduction in the concentration. See Ref. [21] for additional details.

We use 3.25 kg of xenon initially purified to the part-per-billion level using a Monotorr purifier. After this initial purification, the used zirconium cartridge was replaced with a new one. Helium with a purity level of 99.999% is added to the xenon with a concentration of $8 \cdot 10^{-9}$ g/g to serve as a tracer gas during measurements. The tracer provides a useful calibration signal be-

121 cause it is unaffected by both the purifier and the cold trap. The purification
122 efficiencies were calculated from the initial and final values of the impurity-
123 to-helium ratio. We normalize our measurements to the helium signal in
124 order to make small corrections for changes in gas pressure and flow rate.
125 Note that these corrections are typically at the level of only a few percent.
126 To prepare spiked samples impurities of interest are injected into a known
127 volume connected to a pressure gauge. Using purified xenon the impurity is
128 flushed out of the injection volume and is cryopumped into a storage bottle
129 to allow for full mixing. Uncertainties in the prepared mixtures are within
130 5% and are determined from the uncertainty in the injection volume and the
131 error in the pressure gauge.

132 For each test the xenon handling system is first filled with roughly 1050
133 Torr of static xenon gas spiked with 10^{-6} g/g of the specific impurity under
134 study. For this initial fill, the purifier is operated in bypass mode, so that
135 the leak valve samples the unpurified gas. The leak valve to the coldtrap is
136 opened and the RGA partial-pressure measurements are allowed to stabilize.
137 This calibrates the partial-pressure measurements in terms of the known
138 concentration of the impurity in the spiked gas sample. Then the plumbing
139 is switched to purify mode and xenon is made to flow from its supply bottle
140 to a collection bottle passing through the purifier at a fixed flow rate. The
141 output pressure of the purifier is maintained at $1050 \text{ Torr} \pm 3\%$ during data
142 acquisition to maintain a constant leak rate into the coldtrap and RGA. The
143 partial pressure of the impurity is allowed several minutes to stabilize, and
144 then its value is recorded. At the conclusion of the measurement, the input
145 to the cold-trap is closed to get a background measurement. In some tests,
146 using lower leak rates, the leak-valve is opened further at the end of the
147 measurement to increase its sensitivity before closing the input.

148 For highest sensitivity measurements, it is crucial to minimize the back-
149 grounds in the coldtrap. This can be accomplished by making the unpurified
150 gas measurement after the purified gas measurement, because the unpurified
151 gas can contaminate the coldtrap and RGA plumbing with residual back-
152 ground levels for some period of time. For these tests the background level
153 is measured first while the coldtrap remains closed and the xenon handling
154 system is filled with purified gas. Then the purified xenon is allowed to flow
155 through the purifier for 20 minutes at a fixed rate before the leak valve to
156 the cold trap is opened. If no change in the impurity level is seen, we place
157 a limit on the purified signal by assuming that the residual impurity concen-
158 tration in the purified gas is less than 20% of the observed background level.

159 Finally we normalize the measurement (or limit) to the known impurity con-
160 centration in the spiked xenon gas by bypassing the purifier and recording
161 the resulting impurity level with the RGA.

162 Only one data set is taken per day, and the purifier is left at its opera-
163 tional temperature overnight. This is done as a precaution to make sure that
164 the absorbed impurities have time to diffuse into the bulk of the getter, an
165 issue that we discovered while using an older, mostly exhausted purifier. See
166 section 4 for more details.

167 3. Purifier efficiency results

168 We define the purifier efficiency to be the fraction of a given impurity
169 which is removed by the purifier in a single pass under specified flow and
170 temperature conditions. The inefficiency is the fraction of the impurity which
171 remains after a single pass.

172 3.1. Methane purification efficiency

173 Among the impurities that we measure, the purifier has the smallest total
174 absorption capacity for methane, so we tested methane purification first.
175 During the course of these experiments, the purifier was exposed to roughly
176 16 mg of methane, which is less than the 10% of the cartridge’s estimated
177 capacity. To create the xenon-methane mixture we use a methane supply
178 bottle which has a stated purity level of 99.999%. In the following, we report
179 results for two purifier temperatures, 400 °C and 450 °C. Unfortunately, we do
180 not have physical access to the zirconium in the getter, so we cannot measure
181 these temperatures directly. Instead, we quote these temperatures based
182 upon the manufacturer’s specifications [22]. Please contact SAES technical
183 support before modifying the getter temperature.

184 A typical dataset is shown in Figure 2. For this data the xenon was spiked
185 with $1 \cdot 10^{-6}$ g/g of methane, and the purifier temperature is 450 °C.

186 This particular experiment proceeded as follows. Prior to the data shown
187 in the plot, the coldtrap was cooled to liquid nitrogen temperature, and the
188 leak valve was opened. The xenon plumbing system is initially filled in bypass
189 mode with the unpurified xenon gas, and the RGA detects a partial pressure
190 of about $3 \cdot 10^{-7}$ Torr of methane. At time $t = 0$, the plumbing is switched
191 to purify mode, and the xenon gas is made to flow at 7.1 SLPM. The helium
192 is unaffected by the purifier, so its partial pressure remains constant, but
193 the methane partial pressure is seen to drop by about a factor of 300 over

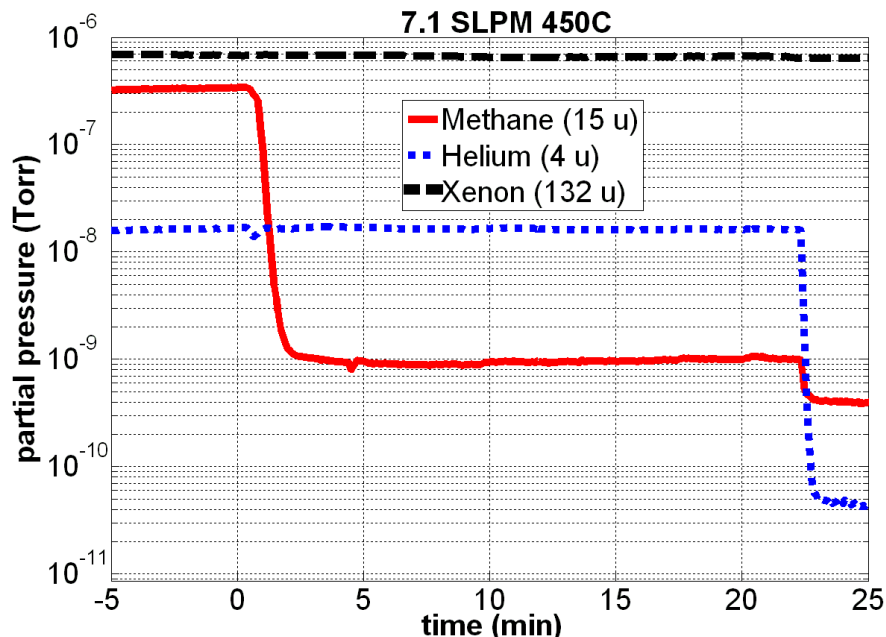


Figure 2: A plot of methane purification data at 450 °C and 7.1 SLPM. The leak valve rate is set to 43 Torr·L/min. See text for further details.

the next few minutes. The xenon partial pressure remains constant due to the action of the coldtrap. At 22 minutes, the leak valve is closed, and the helium and methane levels drop to their background values, while the xenon pressure again remains constant.

Figure 3 shows a similar dataset, taken at 7.1 SLPM and 400 °C. In the 400 °C dataset, we see the methane drop sharply as expected when switched to purify mode, and then rise slowly by a factor of ~ 2.5 over the next 20 minutes. In the 450 °C dataset (shown in Fig. 2) the slow rise is not present. We infer from these results that the getter efficiency is reduced at 400 °C by the cooling effect of the flowing xenon gas, while at 450 °C the getter is able to maintain its full efficiency.

Figure 4 shows how the purification inefficiency for methane depends on gas flow rate and purifier temperature. These results are also listed in Table 1. As expected, the purifier performed best for methane at the higher getter temperature and at lower flow-rates. At 450 °C and 2.5 SLPM the methane purification efficiency is better than 99.99% and consistent with background, while at 400 °C and 10 SLPM the efficiency drops to 92.5%.

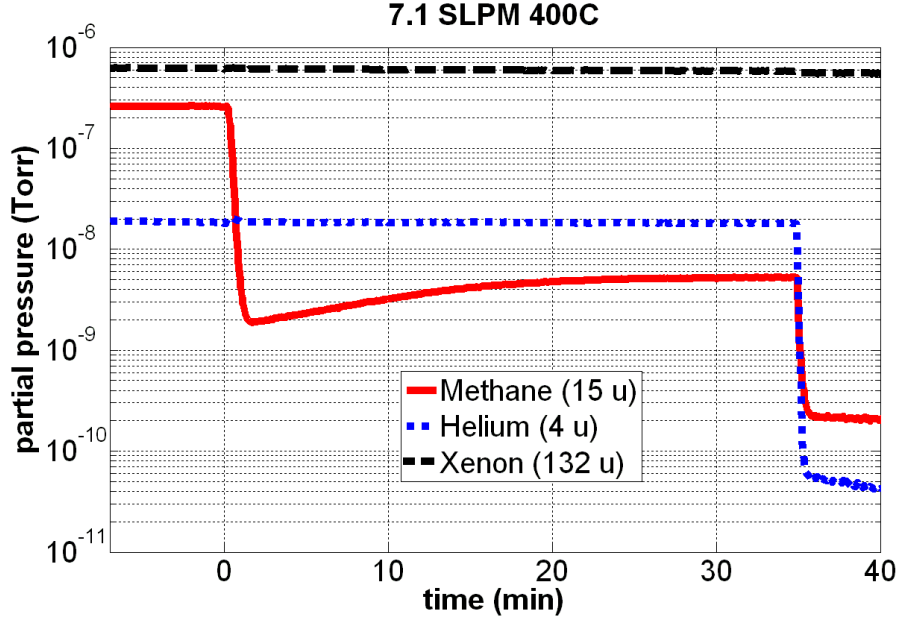


Figure 3: Methane purification data at 400 °C and a flow rate of 7.1 SLPM. The leak valve rate is 43 Torr·L/min. We attribute the slow rise in the methane signal in this data to the cooling effect of the xenon on the getter. Compare to the 450 °C data shown in Fig. 2, where no rise is evident. Note that 400 °C is the default getter temperature.

211 3.2. N₂ and O₂ purification efficiency

212 The getter cartridge was also tested with 10⁻⁶ g/g of O₂ and 10⁻⁶ g/g
 213 of N₂ at 400 °C and at a flow rate of 12.6 SLPM (the maximum achiev-
 214 able flow rate in our system). In purify mode, both O₂ and N₂ dropped to
 215 levels consistent with background, leading to upper limits for the one-pass
 216 purification efficiency of > 99.988% for O₂ and > 99.905% for N₂. These
 217 efficiencies correspond to output purity levels of less than 120 · 10⁻¹² g/g for
 218 O₂ and less than 950 · 10⁻¹² for N₂. We infer from the methane purification
 219 data that lower flow rates and higher temperatures will achieve even better
 220 purification efficiencies. For N₂ and O₂ the purification results in xenon gas
 221 are consistent with those quoted by the manufacturer for argon and helium.

222 4. Purifier Lifetime and Saturation

223 Other studies have observed eventual decrease in purification efficiencies
 224 due to capacity depletion [13]. To track the performance of the SAES PS4-

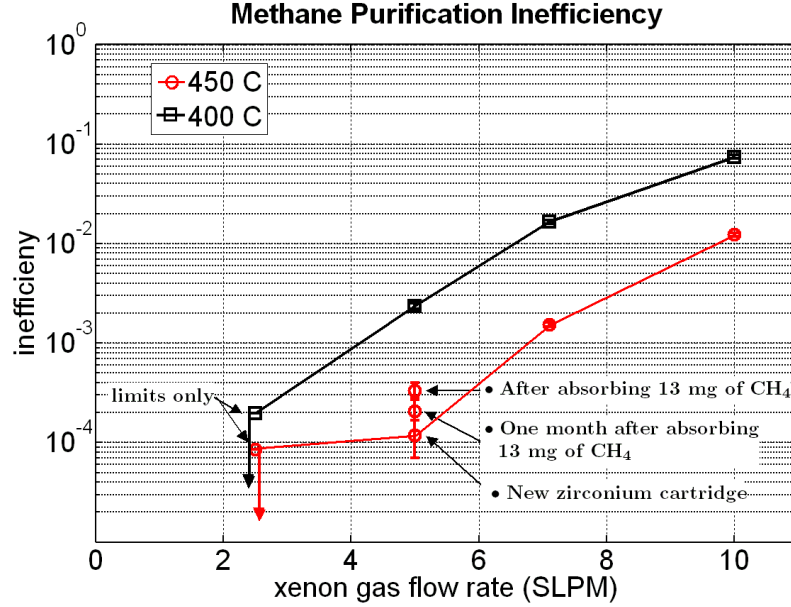


Figure 4: Methane purification inefficiency as a function of flow rate, for two purifier temperatures. The inefficiency is defined as the fraction of the incoming methane which remains at the purifier output.

225 MT3 as its capacity begins to be depleted, we collected the first and last
 226 methane datasets under identical conditions at a flow rate of 5.0 SLPM and
 227 a getter temperature of 450 °C. We find that after the zirconium has absorbed
 228 13 mg of methane, the getter inefficiency increases from 0.01% to 0.03% (see
 229 Figure 4). Furthermore, the measurement at 5.0 SLPM was repeated a third
 230 time after leaving the purifier with 1000 Torr of xenon at its operational
 231 temperature for one month without use. The purifier’s performance appears
 232 to improve somewhat after this interim period. However, the final methane
 233 signal for this dataset was only a few percent above the background, and it is
 234 difficult rule out a systematic effect of this magnitude over such a long time
 235 period.

236 4.1. Purifier life-status light

237 The SAES PS4-MT3-R purifier is equipped with a life-status light which
 238 indicates when the absorption capacity of the getter has been exhausted.
 239 The control electronics for the purifier infers the status of the getter by mea-
 240 suring its resistance. As a practical matter, it is important to note that this

Species	Gas flow rate [SLPM]	Temp. [C]	Init. conc. 10^{-6} [g/g]	Final conc. 10^{-9} [g/g]	1-pass eff. [%]	1-pass ineff. [%]
CH ₄	2.5 $\pm$.05	400	1.2	< 0.24	> 99.98	< 0.02
CH ₄	5.0 $\pm$.05	400	1.8	4.3 $\pm$ 0.36	99.76 $\pm$ 0.02	0.24 $\pm$ 0.02
CH ₄	7.1 $\pm$.05	400	1.0	17 $\pm$ 0.07	98.35 $\pm$ 0.07	1.65 $\pm$ 0.07
CH ₄	10 $\pm$.05	400	1.2	89.5 $\pm$ 3.6	92.53 $\pm$ 0.30	7.47 $\pm$ 0.30
CH ₄	2.5 $\pm$.05	450	1.0	< 0.085	> 99.991	< 0.009
CH ₄	5.0 $\pm$.05	450	1.8	0.162 $\pm$ 0.09	99.988 $\pm$ 0.005	0.012 $\pm$ 0.005
CH ₄	7.1 $\pm$.05	450	1.0	0.190 $\pm$ 0.08	99.846 $\pm$ 0.008	0.15 $\pm$ 0.008
CH ₄	10 $\pm$.05	450	1.8	22.1 $\pm$ 1.1	98.77 $\pm$ 0.06	1.23 $\pm$ 0.06
O ₂	12.6 $\pm$.05	400	1.0	< 0.120	> 99.988	< 0.012
N ₂	12.6 $\pm$.05	400	1.0	< 0.954	> 99.905	< 0.095

Table 1: Purification results for O₂, N₂, and methane. Initial concentrations are accurate to within 5%. The error in inefficiency is calculated from the final and initial background-subtracted signals, each normalized to helium. Each data point was determined by averaging a stabilized signal over a period of one minute. The typical standard deviation in the signal was found to be 2%.

measurement is sensitive primarily to O₂ and other oxygen containing impurities, since zirconium oxide has a higher resistance than pure zirconium. Other zirconium compounds, such as zirconium nitride, do not cause a dramatic change in the resistance of the getter, and their presence will not be detected by the resistance measurement. Therefore the purifier's ability to remove N₂ and methane may be depleted long before the life-status light changes from 'good'.

In fact, when we initially tested our purifier with an older getter cartridge that had been in use in our lab for about two years, we observed that the purifier's performance with respect to N₂ and methane was dramatically diminished although the life-status was indicated as 'good'. At 0.5 SLPM the used getter cartridge was still effectively removing O₂ while allowing nearly 100% of N₂ and methane to pass through at 400 C, as shown in Fig. 5. Note that this purifier model, when new, is rated for use up to a maximum flow rate of 20 SLPM for argon and helium. We also note that this model is designed to remove about 40 g of O₂, 2-3 g of N₂ and about 200 mg of methane in its lifetime [22].

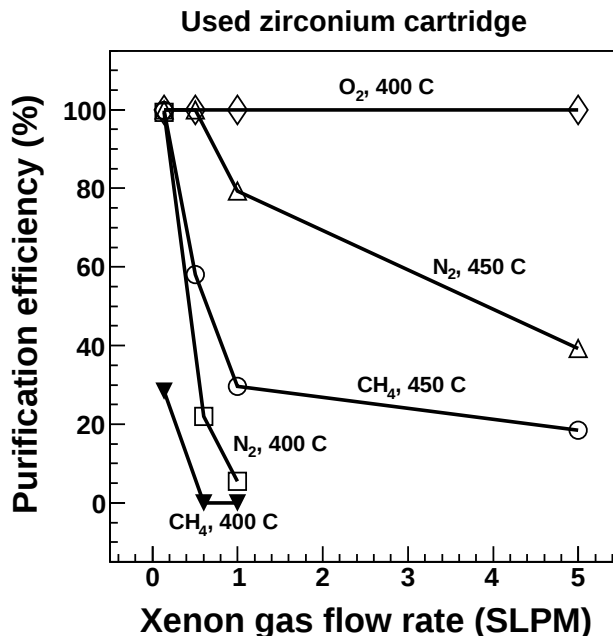


Figure 5: Purification results with an old zirconium cartridge. The purifier remains effective for O₂ removal, but N₂ and methane performance is seriously diminished. The purifier's life-status light still indicates 'good'.

Before replacing the used getter cartridge, we performed a final test comparing its purification efficiencies at 400 °C to 450 C, for N₂ and methane. The xenon used in the test had $4 \cdot 10^{-6}$ g/g of methane and about $30 \cdot 10^{-6}$ g/g of N₂. The results are shown in Figure 5. These tests confirmed that the used cartridge performs better at the higher getter temperature and at lower flow rates. We also observed that the performance of the used getter cartridge would improve somewhat after leaving the getter at its operational temperature for one or more days. This observation is consistent with the expected decrease in the impurity diffusion rate as the bulk zirconium becomes saturated near the end of its life.

In total, our results illustrate the utility of having a dedicated gas purity measurement device to monitor the performance of the getter.

270 5. Summary

271 O₂ and N₂ are removed from xenon very efficiently by the getter. Con-
272 centrations at the outlet are less than $120 \cdot 10^{-12}$ g/g and $955 \cdot 10^{-12}$ g/g,
273 respectively, and are consistent with background. The corresponding single-
274 pass purification efficiencies are greater than 99.99% and 99.9% respectively.
275 These values were measured at a flow rate of 12.6 SLPM, and at the default
276 getter temperature of 400 °C. We expect that performance at lower flow rates
277 and higher temperatures is even better. These results are consistent with the
278 manufacturer’s specifications for the getter in argon and helium.

279 Methane removal from xenon is most effective at lower flow rates and
280 higher getter temperatures. The removal efficiency is better than 99.99%
281 at 450 °C and 2.5 SLPM and drops to 92.5% at 400 °C and 10 SLPM.
282 We attribute the decrease in getter effectiveness at higher flow rates to the
283 cooling effect xenon gas has on the getter.

284 For flow rates of five SLPM or higher, the residual methane concentration
285 at the outlet of the getter can be decreased by about a factor of ten by
286 increasing the temperature from 400 °C to 450 °C.

287 After absorbing 13 mg of methane, we see residual methane in the pu-
288 rified gas increase by a factor of three. We attribute this effect to a partial
289 saturation of the purifier’s methane absorption sites.

290 The getter can become saturated with N₂ and methane while remaining
291 effective for O₂ removal. For xenon use, the manufacturer’s life-status light is
292 not well suited for determining when N₂ or methane saturation has occurred.
293 Therefore, additional techniques should be employed to determine the status
294 of the getter with respect to these species. In many systems of interest for
295 particle detection, we expect the N₂ capacity of the purifier to be exhausted
296 before the O₂ capacity.

297 Since the getter performance in xenon improves at higher temperatures, it
298 seems reasonable that higher temperatures should always be employed when
299 purifying this heavy noble gas. Alternatively, a xenon gas pre-heater could
300 be introduced immediately upstream of the purifier to reduce or eliminate
301 the cooling effect. We have not attempted this strategy in our lab, but we
302 would expect good results based on our experience with this purifier.

303 6. Acknowledgments

304 We thank Marco Succi of SAES Getters for many helpful discussions.
305 This work was supported by National Science Foundation award numbers

306 0810495 and 0919261.

307 **References**

- 308 [1] E. Aprile, T. Doke, arXiv:0910.4956v1.
- 309 [2] G. Bakale, U. Sowada, W. F. Schmidt, J. Phys. Chem. 80 (1976) 2556.
- 310 [3] S. G. Pokachalov, M. A. Kirsanov, A. A. Kruglov, I. M. Obodovski,
311 Nucl. Instrum. Meth. A 327 (1993) 159.
- 312 [4] P. Benetti, et al., Nucl. Instrum. Meth. A 329 (1993) 361.
- 313 [5] A. Bettini, et al., Nucl. Instrum. Meth. A 305 (1991) 177.
- 314 [6] M. Ichege, et al., Nucl. Instrum. Meth. A 333 (1993) 355.
- 315 [7] E. Buckley, et al., Nucl. Instrum. Meth. A 275 (1989) 364.
- 316 [8] G. Carugno, et al., Nucl. Instrum. Meth. A 376 (1996) 149.
- 317 [9] A. Bolotnikov, B. Ramsey, Nucl. Instr. and Meth. A 383 (1996) 619.
- 318 [10] E. Aprile, R. Mukherjee, M. Suzuki, Nucl. Instr. and Meth. A 300 (1991)
319 343.
- 320 [11] N. Stojilovic, E. T. Bender, R. D. Ramsier, Prog. Surf. Sci. 78 (2005)
321 101.
- 322 [12] T. A. Giorgi, B. Ferrario, B. Storey, J. Vac. Sci. Technol. A 3 (1985)
323 417.
- 324 [13] J. D. Baker, et al., J. Vac. Sci. Technol. A 12 (1994) 548.
- 325 [14] K. Watanabe, W. M. Shu, E. Motohashi, M. Matsuyama, Fusion Eng.
326 Des. 39-40 (1998) 1055.
- 327 [15] SAES Pure Gas, Inc., 4175 Sante Fe Rd. San Luis Obispo CA, 93401,
328 www.saespuregas.com.
- 329 [16] K. Pushkin, et al., Instrum. Exp. Tech. 49 (2006) 489.
- 330 [17] K. Pushkin, et al., IEEE Trans. Nucl. Sci. 54 (2007) 744.

- 331 [18] T. Kawano, et al., Fusion Sci. Technol. 41 (2002) 981.
- 332 [19] J. E. Klein, Fusion Sci. Technol. 41 (2002) 998, 6th International Con-
333 ference on Tritium Science and Technology, November 2001, Tsukuba,
334 Japan.
- 335 [20] A. B. Antoniazzi, W. T. Shmayda, Fusion Technol. 30 (1996) 879.
- 336 [21] D. S. Leonard, et al., this issue.
- 337 [22] M. Succi, private communication.